

#### USER GUIDE



Model EA6350

### Contents

Product Overview	3
Top view	3
Back view	4
Setting Up: Basics	5
Where to find more help	5
How to install your router	5
How to Use Linksys Smart Wi-Fi	7
How to connect to Linksys Smart Wi-Fi	7
Device List	8
Guest Access	8
Parental Controls	9
Media Prioritization	9
Speed Test	
External Storage	
Connectivity	
Troubleshooting	
Wireless	
Security	
Troubleshooting	
Your router was not successfully set up	
Your Internet cable is not plugged in message	
Cannot access your router message	
After setup	
The internet appears to be unavailable	
Linksys Smart Wi-Fi does not open in your web browser	
Specifications	
Linksys EA6350	
Environmental	

### **Product Overview**



**Light**—Stays on steadily while power is connected and following a successful Wi-Fi Protected Setup connection. Flashes slowly during bootup, during firmware upgrades, and during a Wi-Fi Protected Setup connection. Flashes quickly when there is a Wi-Fi Protected Setup error.

**USB port**—Connect and share USB drives on your network or on the internet.

#### **Back view**



Adjustable antennas—For best performance, position the antennas vertically at a 90-degree angle.

Wi-Fi Protected Setup<sup>™</sup> button—Press to configure wireless security on Wi-Fi Protected Setupenabled network devices.

**Reset button**—Press and hold for until the power LED starts flashing to reset the router to factory settings. You can also restore the factory settings using Linksys Smart Wi-Fi on the internet or mobile app.

**Ethernet ports**—Connect ethernet cables to these blue gigabit (10/100/1000) ports, and to wired devices on your network.

#### **Note—**For best performance, use CAT5e or higher rated cables on the ethernet ports.

**Internet port**—Connect an ethernet cable to this yellow gigabit (10/100/1000) port, and to a broadband internet cable/DSL or fiber modem.

**Note—**For best performance, use CAT5e or higher rated cables on the ethernet ports.

**Power port**—Connect the included AC power adapter.

**Power switch**—Press | (on) to turn on the router.

## **Setting Up: Basics**

### Where to find more help

In addition to this user guide, you can find help at these locations:

- Linksys.com/support/EA6350 (documentation, downloads, FAQs, technical support, live chat, forums)
- Linksys Smart Wi-Fi help (connect to Linksys Smart Wi-Fi, then click Help at the top of the screen)

**Note**—Licenses and notices for third party software used in this product may be viewed on <u>http://support.linksys.com/en-us/license</u>. Please contact <u>http://support.linksys.com/en-us/gplcodecenter</u> for questions or GPL source code requests.

### How to install your router

- 1. If replacing an existing router, disconnect that router first.
- 2. Turn the antennas up and plug in your router to a power source. European versions: press the power switch to | (on).
- 3. Connect the internet cable from your modem to the yellow Internet port on your router. Wait until the indicator light on your router is solid.
- 4. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) If you need help connecting to the network refer to your device documentation on the provided CD.
  Note—You will not have internet access until router setup is complete.
- 5. Open a web browser to launch the Linksys Smart Wi-Fi Router setup instructions. If you don't see the instructions, type linksyssmartwifi.com in the address bar.

At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account. Use Linksys Smart Wi-Fi to configure your router from any computer with an Internet connection.

Manage your router's settings:

- Change your router's name and password
- Set up guest access
- Configure parental controls
- Connect devices to your network
- Test your internet connection speed

**Note**—As part of Linksys Smart Wi-Fi account setup, you will be sent a verification e-mail. From your home network, click the link in the email to associate your router with the Linksys Smart Wi-Fi account.

**Tip**—Print this page, then record your router and account settings in the table below as a reference. Store your notes in a safe place.

2.4 GHz Network Name	
Network Password	
5 GHz Network Name	
Network Password	
Router Password	
Guest Network Name	
Guest Network Password	
Linksys Smart Wi-Fi Username	
Linksys Smart Wi-Fi Password	

# How to Use Linksys Smart Wi-Fi

You can configure your router from anywhere in the world by using Linksys Smart Wi-Fi, but you can also configure your router directly from your home network. Linksys Smart Wi-Fi may be available for your mobile device, as well. See your device's app store for information.

### How to connect to Linksys Smart Wi-Fi

To connect to Linksys Smart Wi-Fi:

- 1. Open your computer's web browser.
- 2. Go to www.linksyssmartwifi.com and log in to your account.



If you can't remember your password, click *Forgot your password?* and follow the on-screen instructions to recover it.

### **Device List**

Lets you display and manage all network devices connected to your router. You can view devices on your main network and your guest network, or display information about each device.



### **Guest Access**

Lets you configure and monitor a network that guests can use without accessing all of your network resources.



### **Parental Controls**

Lets you block web sites and set internet access times.



### **Media Prioritization**

Lets you set which devices and applications have top priority for your network traffic.

legia Prioritization	Show widget on the homepage
re priority to those devices, applications, and games that connect to streaming or real-time media vices for best performance on your home network.	
ioritization: ON Reset Prioritization   Settings	
High Priority	
Drag and drop devices to prioritize	
Normal Priority	
Normal Priority Devices	Applications Edit   Delete
Normal Priority Devices Main PC = Landroid-89368ba5b =	Applications Edit   Delete
Normal Priority       Devices       Image: State of the state	Applications Edit   Delete
Normal Priority Devices Main PC  android-89368ba5b  android_10f1d09a86	Applications Edit   Delete Spotify  Conline Games Edit   Delete
Normal Priority Devices          Image: state stat	Applications Edit   Delete           Spotify         •           Online Games Edit   Delete           City of Herces / Villians         •

### **Speed Test**

Lets you test your network's internet connection speed.



### **External Storage**

Lets you access an attached USB drive (not included) and set up file sharing, a media server, and

#### FTP access.

tatus Folder Access FTP Server Media Se	irver
External Storage Drive	Folder Access         Access shared folders from a computer on your network.         PC access (File explorer): \\192.168.1.1         MAC access (Finder): smb//192.168.1.1         FTP Server is OFF
cure Folder Access is OFF user can access content via shared folders.	FTP server: Disabled Media Server (DLNA)
PC access (File explorer): \\192.168.1.1 MAC access (Finder): smb://192.168.1.1	Access media on your storage device.

### Connectivity

Lets you configure basic and advanced network settings.

Basic Internet Settings Local Network Advan	ced Routing VLAN Administration
etwork Name and Password   Edit	Router Firmware Update
2.4 GHz network name: Linksys02230	Automatic (Current Version: 1.1.2.170091
Network password: cde0hcijk1	Check for Updates
5 GHz network name: Linksys02230_5GHz	
Network password: cde0hcijk1	Manual: No file chosen Choose File Start
outer Password   Edit	Time Zone
Router password: *******	(GMT-08:00) Pacific Time (USA & Canada)
Router password hint: Admin	Automatically adjust for Daylight Savings Time
	Activity Lights
	ON Enable/disable activity lights. Power light will remain on.

### Troubleshooting

Lets you diagnose problems with your router and check the status of the network.

tatus Diagnostics Log	la			
ces   Report				
Name	MAC address	IPv4 address	Connection	Refresh
Main PC	6C:F0:49:8E:36:EA	192.168.1.124	LAN	Open in browser
android-89368ba5b9020719	C0:C1:C0:5B:8E:28	192.168.1.140	Wireless	
				Print
Name	MAC address	IPv6 address	Connection	

### Wireless

Lets you configure your router's wireless network. You can change the security mode, password, MAC filtering, and connect devices using Wi-Fi Protected Setup.

Wireless M	AC Filtering Wi-Fi Protec	ted Setup Wir	eless Scheduler		
Network name:	Linksys02230	2.4 GHz			Network: ON
Password:	542b542b	Broadcast SSID:	Yes *	Channel:	8 - 2.447 GHz
Security mode:	WPA2 Personal T	Network mode:	Mixed *	Channel width:	Auto
Network name:	Linksys02230_5GHz	5 GHz			Network: ON
Password:	m84shxx5xw	Broadcast SSID:	Yes *	Channel:	Auto
Security mode:	WPA2 Personal	Network mode:	Mixed *	Channel width:	Auto

### Security

Lets you configure your router's wireless security. You can set up the firewall, VPN settings, and make custom settings for applications and games.

nemun			rs.		
IDud ODI Grouvall protoction					
IPv6 SPI firewall protection	Enabled	Filter anonyl	nous internet requests		
II VO OI I IIIEWali protection	<ul> <li>Enabled</li> </ul>	Filter multica	ast		
PN Passthrough		Filter Interne	et NAT redirection		
IPSec Passthrough	Enabled	Filter ident (	Port 113)		
PPTP Passthrough	Enabled				
L2TP Passthrough	Enabled				
Pv6 Port Services					
Description	Protocol	IPv6 Address	Allow	Enabled	

# Troubleshooting

You can find more help from our award-winning customer support at Linksys.com/support/EA6350.

### Your router was not successfully set up

If Linksys Smart Wi-Fi did not complete the setup, you can try the following:

• Press and hold the Reset button on your router with a paperclip or pin until the LED starts blinking (about 10 seconds). Install the router again.



- Temporarily disable your computer's firewall (see the security software's instructions for help). Install the router again.
- If you have another computer, use that computer to install the router again.

### Your Internet cable is not plugged in message

If you get a "Your Internet cable is not plugged in" message when trying to set up your router, follow these troubleshooting steps.

 Make sure that an ethernet or internet cable (or a cable like the one supplied with your router) is securely connected to the yellow Internet port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled ethernet, but may be named Internet or WAN.



- Make sure that your modem is connected to power and is turned on. If it has a power switch, make sure that it is set to the ON or I (as opposed to O) position.
- If your internet service is cable, verify that the cable modem's CABLE port is connected to the coaxial cable provided by your ISP.



Back view of cable modem

 If your internet service is DSL, make sure that the DSL phone line is connected to the modem's DSL port.



- If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.
- Install the router again.

### Cannot access your router message

To access your router, you must be connected to your own network. If you currently have wireless internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers, do the following\*:

- 1. On your Windows desktop right-click the wireless icon in the system tray.
- 2. Click View Available Wireless Networks. A list of available networks will appear.
- 3. Click your own network name. Click Connect. In the example below, the computer was connected to another wireless network named **wraith\_5GHz**. The wireless network name of the Linksys EA6350 router, **Damaged\_Beez2.4** in this example, is shown selected.



- 4. If you are prompted to enter a network key, type your password (Security Key) into the Network key and Confirm network key fields. Click Connect.
- 5. Your computer connects to the network, and you should now be able to access the router.

\*Depending on your version of Windows, there could be some differences in wording or icons in these steps.

To fix the problem on Mac computers, do the following:

- 1. In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks will appear. Linksys Smart Wi-Fi has automatically assigned your network a name.
- 2. Click your own network name. Click Connect. In the example below, the computer was connected to another wireless network named **wraith\_5GHz**. The wireless network name of the Linksys EA6350 router, **Damaged\_Beez2.4** in this example, is shown selected.

🛜 100% 🕼 📕 Fri 2:32 PM	
Wi-Fi: Looking for Networks Turn Wi-Fi Off	
✓ wraith_5GHz 8OLCVBM5	((· ((·
Damaged_Beez2.4	_
wraith	🗎 🤶
wraith-guest	((i:
wraith2.4_6700	9
wraith5_6700	9
wraith_5GHz-guest	((i:
Join Other Network	
Create Network	
Open Network Preferences	

- 3. Click the wireless network name of your Linksys EA6350 router (BronzeEagle in the example).
- 4. Type your wireless network password (Security Key) into the Password field. Click OK.

### After setup

#### The internet appears to be unavailable

If the internet has difficulty communicating with your router, the problem may appear as a "Cannot find [internet address]" message in your Web browser. If you know that the internet address is correct, and if you've tried several valid internet addresses with the same result, the message could mean that there's a problem with your ISP or modem communicating with your router.

Try the following:

- Make sure that the network and power cables are securely connected.
- Make sure that the power outlet that your router is connected to has power.
- Reboot your router.
- Contact your ISP and ask about outages in your area.

The most common method of troubleshooting your router is to turn it off, then back on again. Your router can then reload its custom settings, and other devices (such as the modem) will be able to rediscover the router and communicate with it. This process is called rebooting.

To reboot your router using the power cord, do the following:

- 1. Disconnect the power cord from the router and the modem.
- 2. Wait 10 seconds and reconnect the power cord to the modem. Make sure it has power.
- 3. Wait until the modem's online indicator has stopped blinking (about two minutes). Reconnect the power cord to the router.

4. Wait until the power indicator stops blinking. Wait two minutes before trying to connect to the internet from a computer.

To reboot your router using Linksys Smart Wi-Fi, do the following:

- 1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page 7.)
- 2. Under Router Settings, click Troubleshooting.
- 3. Click the *Diagnostics* tab.
- 4. Under *Reboot*, click Reboot.

Rebooting the router Rebooting the router disconnects it from the Internet, causing all connected to lose Internet connectivity. When the reboot completes, the router and all of will be reconnected.	It from the Internet, causing all connected devices the reboot completes, the router and all devices	Important		
Rebooting the router disconnects it from the Internet, causing all connected to lose Internet connectivity. When the reboot completes, the router and all c will be reconnected.	It from the Internet, causing all connected devices the reboot completes, the router and all devices	Rebooting the router		
Do you want to continue?		Rebooting the router disconnects it fr to lose Internet connectivity. When th will be reconnected.	om the Internet, causing a e reboot completes, the ro	all connected devices outer and all devices
bo you wan to continue.		Do you want to continue?		

5. Click **Yes**. The router will reboot. While the router is rebooting, all connected devices will lose their internet connection, and will automatically reconnect when the router is ready again.

### Linksys Smart Wi-Fi does not open in your web browser

The latest versions of Google ChromeTM, Firefox®, Safari® (for Mac® and iPad®), Microsoft Edge, and Internet Explorer® version 8 and newer work with Linksys Smart Wi-Fi.

# Specifications

### Linksys EA6350

Model Name	R63
Description	Dual-Band AC Router with Gigabit and 1×USB
Model Number	EA6350
Switch Port Speed	10/100/1000 Mbps (Gigabit Ethernet)
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	2 external adjustable antennas
Ports	Power, USB (1), Internet, Ethernet (1-4), R-SMA antenna (2)
Buttons	Reset, Wi-Fi Protected Setup, Power
LEDs	Top panel: Power
	Back panel: Internet, Ethernet (1-4)
UPnP	Supported
Security Features	WPA2
Security Key Bits	Up to 128-bit encryption
Storage File System Support	FAT, NTFS, and HFS+
Browser Support	Internet Explorer 8 or higher, Firefox 4 or higher, Google Chrome 10 or higher, and Safari 4 or higher

### Environmental

Dimensions	7.56" x 1.47" x 4.68" (192 x 37 x118.8 mm)
Unit Weight	10.01 oz. (284 g)
Power	12V, 1.5A
Certifications	FCC, IC, CE, Wi-Fi a/b/g/n/ac
Operating Temperature	32 to 104°F (0 to 40°C)
Storage Temperature	-4 to 140°F (-20 to 60°C)
Operating Humidity	10% to 80% relative humidity, non-condensing
Storage Humidity	5% to 90% non-condensing

#### Notes:

For regulatory, warranty, and safety information, see the CD that came with your router or go to Linksys.com/support/EA6350.

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners. Licenses and notices for third party software used in this product may be viewed here: http://support.linksys.com/en-us/license. Please contact http://support.linksys.com/en-us/gplcodecenter for questions or GPL source code requests.

© 2019 Belkin International, Inc. and/or its affiliates. All rights reserved.



GUÍA DEL USUARIO



Modelo EA6350

### Contenido

Descripción general del producto	3
Vista superior	3
Vista del reverso	4
Instalación: principios básicos	5
Dónde encontrar más avuda	5
Cómo instalar el router	5
Cómo usar Linksys Smart Wi-Fi	8
Cómo conectar a Linksys Smart Wi-Fi	8
Lista de dispositivos	9
Acceso de usuarios invitados	9
Controles parentales	10
Priorización del contenido multimedia	10
Test de velocidad	11
Almacenamiento externo	11
Conectividad	
Resolución de problemas	12
Red inalámbrica	13
Seguridad	13
Resolución de problemas	14
El router no se ha instalado correctamente	14
Mensaje «Your Internet cable is not plugged in» (el cable de internet no está cor	nectado)
	14
Mensaje «Cannot access your router» (no se puede acceder al router)	16
Tras la instalación	17
Parece que no hay conexión a internet disponible	17
Linksys Smart Wi-Fi no se abre en tu explorador web	18
Especificaciones	
Linksys EA6350	
Características físicas	

### Descripción general del producto



Luz: permanece encendida mientras el adaptador de corriente está conectado y después de establecer una conexión Wi-Fi Protected Setup. Parpadea despacio durante el arranque, las actualizaciones de firmware y la conexión de Wi-Fi Protected Setup. Parpadea rápidamente cuando se produce un error de Wi-Fi Protected Setup.

Puerto USB: conecta y comparte unidades USB en tu red o en internet.

### Vista del reverso



**Antenas ajustables**: para obtener el mejor rendimiento coloca las antenas en posición vertical en un ángulo de 90 grados.

Botón de Wi-Fi Protected Setup<sup>™</sup>: presiona para configurar la seguridad inalámbrica en aquellos dispositivos habilitados con Wi-Fi Protected Setup.

**Botón de Reset (Reinicio):** presiona y mantén presionado hasta que el LED de corriente empiece a parpadear para restablecer los ajustes de fábrica. También puedes restaurar los ajustes de fábrica usando Linksys Smart Wi-Fi por explorador web en internet o por su aplicación móvil.

**Puertos Ethernet:** conecta los cables Ethernet a estos puertos Gigabit azules (10/100/1000) y a los dispositivos conectados por cable en tu red.

**Nota:** para obtener el mejor rendimiento usa para los puertos Ethernet un cable CAT5e u otro de una categoría superior.

**Puerto de internet:** conecta un cable Ethernet a este puerto Gigabit amarillo (10/100/1000) y a un módem de cable/DSL o de fibra óptica.

**Nota:** para obtener el mejor rendimiento usa en los puertos Ethernet un cable CAT5e u otro de una categoría superior.

Puerto de alimentación: conecta el adaptador de corriente de CA incluido a este puerto.

Interruptor de encendido: presiona | (on) para encender el router.

### Instalación: principios básicos

### Dónde encontrar más ayuda

Además de en esta guía del usuario puedes obtener ayuda en los siguientes sitios web:

- Linksys.com/support/EA6350 (documentación, descargas, PF, asistencia técnica, chat en vivo, foros...).
- Ayuda para Linksys Smart Wi-Fi (conecta a la Linksys Smart Wi-Fi y a continuación haz clic en «Ayuda», en la parte superior de la pantalla).

**Nota:** puedes consultar las licencias y notas del software de terceros utilizados en este producto en <u>http://support.linksys.com/en-us/license</u>. Por favor, contacta con <u>http://support.linksys.com/en-us/gplcodecenter</u> para preguntas o solicitudes de código fuente GPL.

### Cómo instalar el router

- 1. Si remplazas un router ya existente desconéctalo primero.
- 2. Coloca las antenas en posición recta y enchufa el router a una fuente de alimentación. Modelos europeos: presiona el interruptor de corriente para ponerlo en la posición | (on).
- Conecta el cable de internet desde el módem hasta el puerto amarillo de internet del router.
   Espera hasta que el indicador de encendido del router se encienda fijo.
- 4. Conecta al nombre de red inalámbrica seguro que se muestra en la guía de inicio rápido incluida con el router (podrás cambiar el nombre de la red y la contraseña más adelante). Si necesitas ayuda para conectar a la red consulta el CD de documentación incluido con el dispositivo.

Nota: no tendrás acceso a internet hasta que la instalación del router se haya completado.

5. Abre un navegador de internet para ejecutar la instrucciones de instalación del router por Linksys Smart Wi-Fi. Si no ves las instrucciones escriba linksyssmartwifi.com en la barra de direcciones. Al final de la instalación sigue las instrucciones que aparecen en pantalla para configurar tu cuenta de Linksys Smart Wi-Fi. Usa Linksys Smart Wi-Fi para configurar tu router desde cualquier ordenador con una conexión a internet.

Administra los ajustes del router:

- Cambia el nombre y la contraseña del router.
- Establece el acceso de usuarios invitados.
- Configura los controles parentales.
- Conecta dispositivos a tu red.
- Evalúa la velocidad de tu conexión a internet.

**Nota:** como parte del proceso de configuración de la cuenta de Linksys Smart Wi-Fi recibirás un email de verificación. Desde tu red doméstica haz clic en el enlace del e-mail para asociar tu router con la cuenta de Linksys Smart Wi-Fi. **Consejo:** imprime esta página y anota en la siguiente tabla como referencia futura los valores de configuración de tu router y de la cuenta. Guarda estas notas en un sitio seguro.

Nombre de la red de 2,4 GHz	
Contraseña de red	
Nombre de red de 5 GHz	
Contraseña de red	
Contraseña del router	
Nombre de la red para invitados	
Contraseña de la red de invitados	
Nombre de usuario de Linksys Smart Wi-Fi	

# Cómo usar Linksys Smart Wi-Fi

Aunque puedes configurar tu router desde cualquier lugar del mundo usando Linksys Smart Wi-Fi también puedes hacerlo directamente desde tu red doméstica. Es posible igualmente que puedas utilizar Linksys Smart Wi-Fi desde tu dispositivo móvil. Consulta la tienda en línea de aplicaciones de tu dispositivo para obtener más información a este respecto.

### Cómo conectar a Linksys Smart Wi-Fi

Para conectar a Linksys Smart Wi-Fi:

- 1. Abre el explorador web de tu ordenador.
- 2. Ve a www.linksyssmartwifi.com e inicia allí la sesión de tu cuenta.

			Email Address
			Password
	Mahage parentals controls experiences	>	Remember Me     Forgot your password?      Sign in
			Don't have an account? Click here,
		_	English (United States) 🔻
e your Linksys Sma ywhere, at any time, vices, set parental c	rt Wi-Fi account to access your home network even from your mobile device. Easily connect ontrols, get access to Smart Wi-Fi mobile	from new	

Si no recuerdas tu contraseña haz clic en *Forgot your password?* (¿Olvidaste tu contraseña?) y sigue las instrucciones en pantalla para recuperarla.

### Lista de dispositivos

Esta función te permite visualizar y gestionar todos los dispositivos de red conectados al router. Puedes ver los dispositivos de la red principal y la red de invitados o mostrar información acerca de cada dispositivo.

TTKs-iPad Online	-	ODKs-iPod Online		ODK's Kindle Fire Online
ObristahamiDad				Obisisebasis MacDael, Air
Online	0	Online	0	Online
EA6350 Online				
Cinine Cinine	0			

### Acceso de usuarios invitados

Te permite configurar y controlar una red que tus usuarios invitados podrán utilizar sin tener acceso a todos los recursos de la red.



### **Controles parentales**

Esta función te permite bloquear páginas web y fijar tiempos de acceso a internet.



#### Priorización del contenido multimedia

Te permite establecer qué dispositivos y aplicaciones tienen la máxima preferencia en el tráfico de tu red.

ledia Prioritization	Show widget on the homepage
ve priority to those devices, applications, and games that connect to streaming or real-time n rvices for best performance on your home network.	nedia
rioritization:   Reset Prioritization   Settings	
High Priority	
Drag and drop devices to priorit	ze
Drag and drop devices to priorit Normal Priority Devices	Applications Edit   Delete
Drag and drop devices to priorit Normal Priority Devices Main PC = & android-89368ba5b =	Applications Edit   Delete
Drag and drop devices to priorite Normal Priority Devices Main PC  android_89368ba5b = android_10f1d09a86 =	Applications Edit   Delete Spotify
Drag and drop devices to priorite Normal Priority Devices Main PC Android-89368ba5b android_10f1d09a86	Applications Edit   Delete  Spotify  Online Games Edit   Delete
Drag and drop devices to priorite  Normal Priority  Devices  Main PC  Android_10f1d09a86  Android_10f1d09a86	Applications Edit   Delete  Spotify  Online Games Edit   Delete  City of Heroes / Villians
Drag and drop devices to priority         Devices         Main PC         android_89368ba5b	Applications Edit   Delete  Spotify  Conline Games Edit   Delete  City of Herces / Villians  T
Drag and drop devices to priorite Normal Priority Devices          Main PC	Applications Edit   Delete          Spotify       •         Online Games Edit   Delete         City of Herces / Villians       •

### Test de velocidad

Te permite evaluar la velocidad de tu conexión a internet.



### Almacenamiento externo

Te permite acceder a una unidad USB conectada (no incluida) y configurar el sistema para compartir archivos, un servidor multimedia o el acceso FTP.

Status Folder Access FTP Server Media Server	
xternal Storage Drive	Folder Access Access shared folders from a computer on your network.
External Storage volume name: KINGSTON	PC access (File explorer): \\192.168.1.1 MAC access (Finder): smb://192.168.1.1
Space used: 323 MB used of 14.83 GB total. Safely remove drive Refresh	FTP Server is OFF Content is not accessible to any user via FTP.
ecure Folder Access is OFF	FTP server: Disabled
y user can access content via shared folders.	Media Server (DLNA)
PC access (File explorer): \\192.168.1.1	Access media on your storage device.
MAC access (Finder): smb://192.168.1.1	DLNA server: Linksys02230

### Conectividad

Te permite configurar los ajustes básicos y avanzados de la red.

Basic Internet Settings Local Network Adva	nced Routing VLAN Administration
Network Name and Password   Edit	Router Firmware Update
2.4 GHz network name: Linksys02230	Automatic (Current Version: 1.1.2.170091)
Network password: cde0hcijk1	Check for Updates
5 GHz network name: Linksys02230_5GHz	
Network password: cde0hcijk1	Manual: No file chosen Choose File Start
Router Password   Edit	Time Zone
Router password: *******	(GMT-08:00) Pacific Time (USA & Canada)
Router password hint: Admin	Automatically adjust for Daylight Savings Time
	Activity Lights
	Enable/disable activity lights. Power light will remain on.

### Resolución de problemas

Te permite diagnosticar problemas con el router y comprobar el estado de la red.

tatus Diagnostics Log	la			
ces   Report				
Name	MAC address	IPv4 address	Connection	Refresh
Main PC	6C:F0:49:8E:36:EA	192.168.1.124	LAN	Open in browser
android-89368ba5b9020719	C0:C1:C0:5B:8E:28	192.168.1.140	Wireless	
				Print
Name	MAC address	IPv6 address	Connection	
				DHCP client table

### **Red inalámbrica**

Esta opción te permite configurar la red inalámbrica del router. Puedes cambiar el modo de seguridad, la contraseña y el filtrado MAC y conectar dispositivos a través de Wi-Fi Protected Setup.

Wireless M	AC Filtering Wi-Fi Protei	cted Setup Wir	eless Scheduler		
Network name:	Linksys02230	2.4 GHz			Network: ON
Password:	542b542b	Broadcast SSID:	Yes v	Channel:	8 - 2.447 GHz 🔻
Security mode:	WPA2 Personal	Network mode:	Mixed *	Channel width:	Auto *
Network name:	Linksys02230_5GHz	5 GHz			Network: ON
Password:	m84shxx5xw	Broadcast SSID:	Yes •	Channel:	Auto 🔻
Security mode:	WPA2 Personal	Network mode:	Mixed *	Channel width:	Auto *

### Seguridad

Te permite configurar la red inalámbrica del router. Puedes configurar el firewall y los parámetros VPN, y crear parámetros predeterminados para aplicaciones y juegos.

irewall		Internet filt	ers		
IPv4 SPI firewall protect	ion Z Enabled	Filter and	nymous Internet requests		
IPv6 SPI firewall protect	ion I Enabled	Filter mul	licaet		
PN Passthrough			rnet NAT redirection		
IPSec Passthrough	Enabled	Filter iden	it (Port 113)		
PPTP Passthrough	Enabled				
L2TP Passthrough	Enabled				
Pv6 Port Service	5				
Description	Protocol	IPv6 Address	Allow	Enabled	

# Resolución de problemas

Puedes obtener más ayuda acudiendo a nuestro galardonado servicio de atención al cliente en la siguiente dirección: Linksys.com/support/EA6350.

### El router no se ha instalado correctamente

Si Linksys Smart Wi-Fi no ha completado la instalación puedes probar lo siguiente:

• Presiona y mantén presionado el botón Reset (Reinicio) en tu router con un clip o alfiler hasta que el LED comience a parpadear (unos 10 segundos). Instala de nuevo el router.



- Deshabilita temporalmente el firewall del ordenador (consulta las instrucciones del software de seguridad para obtener ayuda). Instala de nuevo el router.
- Si tienes otro ordenador, utilízalo para volver a instalar el router de nuevo.

# Mensaje «Your Internet cable is not plugged in» (el cable de internet no está conectado)

Si aparece el mensaje «Your Internet cable is not plugged in» (el cable de internet no está conectado) cuando intentas configurar el router sigue estos pasos de resolución de problemas.

 Asegúrate de que hay un cable de Ethernet o internet (o un cable idéntico al incluido con el router) bien conectado al puerto WAN amarillo en el router y al puerto apropiado en tu router. Este puerto en el módem suele estar etiquetado como Ethernet, pero puede ser denominado también como internet o WAN.



- Asegúrate de que el módem esté enchufado y encendido. Si tienes un interruptor de alimentación asegúrate de que está fijado en la posición ON (Encendido) o I (y no en O).
- Si tu servicio de internet es por cable verifica que el cable coaxial suministrado por el ISP está bien conectado al puerto de CABLE del cable-módem.



Back view of cable modem

 Si tu servicio de internet es DSL asegúrate de que la línea de teléfono DSL está conectada al puerto DSL del módem.



- Si el ordenador estaba conectado anteriormente al módem mediante un cable USB desconecta dicho cable.
- Instala de nuevo el router.

# Mensaje «Cannot access your router» (no se puede acceder al router)

Para acceder al router debes estar conectado a tu propia red. Si ya dispones de acceso a internet inalámbrico, puede que el problema esté motivado por una conexión incorrecta a una red inalámbrica distinta.

Para resolver el problema en ordenadores con Windows haz lo siguiente:

- 1. En el Escritorio de Windows haz clic con el botón derecho del ratón sobre el icono de señal inalámbrica de la bandeja del sistema.
- 2. Haz clic en «Ver redes inalámbricas disponibles». Aparecerá una lista de las redes inalámbricas disponibles.
- Haz clic en el nombre de tu red. Haz clic en «Conectar». En el ejemplo que se muestra a continuación el ordenador estaba conectado a otra red inalámbrica con el nombre wraith\_5GHz. El nombre de red inalámbrica del router Linksys EA6350, Damaged\_Beez2.4 en este ejemplo se muestra seleccionado.



- 4. Si se te solicita que introduzcas una clave de red escribe tu contraseña (clave de seguridad) en los campos «Clave de red» y «Confirmar clave de red». Haz clic en «Conectar».
- 5. Tu ordenador se conectará a la red y ahora debería poder acceder al router.

\*Dependiendo de tu versión de Windows es posible que existan algunas diferencias en el texto específico o los iconos contenidos en estos pasos.

Para solucionar el problema en ordenadores Mac haz lo siguiente:

- 1. Haz clic en el icono Wi-Fi de la barra de menús situada en la parte superior de la pantalla. Aparecerá una lista de las redes inalámbricas. Linksys Smart Wi-Fi ha asignado automáticamente un nombre a tu red.
- Haz clic en el nombre de tu red. Haz clic en «Conectar». En el ejemplo que se muestra a continuación, el ordenador estaba conectado a otra red inalámbrica con el nombre wraith\_5GHz. El nombre de red inalámbrica del router Linksys EA6350, Damaged\_Beez2.4 en este ejemplo se muestra seleccionado.



- 3. Haz clic en el nombre de red inalámbrica de su router EA6350 (BronzeEagle en el ejemplo).
- 4. Escribe la contraseña de la red inalámbrica (clave de seguridad) en el campo «Contraseña». Haz clic en OK (Aceptar).

### Tras la instalación

#### Parece que no hay conexión a internet disponible

Si se producen dificultades de conexión entre internet y tu router el problema puede manifestarse con un mensaje de «No se puede encontrar [dirección de internet]» en el explorador web. Si tienes la certeza de que la dirección de internet es correcta y lo has intentado varias veces con distintas direcciones de internet válidas con el mismo resultado el mensaje podría significar que existe un problema con tu ISP o con la comunicación entre el router y el módem.

Intenta hacer lo siguiente:

- Asegúrate de que la red y los cables de corriente están correctamente conectados.
- Asegúrate de que la toma de corriente a la que el router está enchufado suministra electricidad.
- Reinicia el router.
- Contacta con tu ISP y pregunta si se están produciendo apagones en tu área.

El método más común para resolver problemas con el router es apagarlo y volverlo a encender. Tu router puede cargar de nuevo sus parámetros de configuración personalizados y otros dispositivos (como el módem) podrán encontrar de nuevo el router y comunicarse con él. Este proceso se denomina reinicio.

Para reiniciar tu router usando el cable de corriente haz lo siguiente:

- 1. Desconecta el cable de corriente del router y del módem.
- 2. Espera 10 segundos y vuelve a conectar el cable al módem. Asegúrate de que este recibe corriente.
- 3. Espera hasta que el indicador de conexión del módem haya parado de parpadear (unos dos minutos). Vuelve a conectar el cable de corriente al router.
- 4. Espera a que el indicador de corriente deje de parpadear. Espera dos minutos antes de intentar conectarte de nuevo a internet desde un ordenador.

Para reiniciar el router usando la Linksys Smart Wi-Fi haz lo siguiente:

- 1. Inicia la sesión en Linksys Smart Wi-Fi (Consulta «Cómo conectar a Linksys Smart Wi-Fi» en la página <u>8</u>.)
- 2. Bajo Ajustes del router haz clic en Resolución de problemas.
- 3. Haz clic en la pestaña de Diagnósticos.
- 4. Bajo *Reinicio del sistema* haz clic en Reiniciar.

om the Internet, causing a e reboot completes, the ro	all connected devices outer and all devices
Yes	No
	om the Internet, causing a e reboot completes, the ro

5. Haz clic en **Sí**. El router se reiniciará. Mientras que el router se está reiniciando todos los dispositivos conectados perderán su conexión a internet y se conectarán automáticamente cuando el router esté listo de nuevo.

#### Linksys Smart Wi-Fi no se abre en tu explorador web

Las últimas versiones de Google Chrome<sup>™</sup>, Firefox®, Safari® (para Mac® y iPad®), Microsoft Edge y Internet Explorer® versión 8 y más recientes funcionan con Linksys Smart Wi-Fi.

## Especificaciones

### Linksys EA6350

Nombre del modelo	R63
Descripción	Router AC de doble banda con Gigabit y 1
	puerto USB
Número del modelo	EA6350
Velocidad de puerto de switch	10/100/1000 Mbps (Gigabit Ethernet)
Radiofrecuencia	2,4 GHz y 5 GHz
N.º de antenas	2 antenas externas regulables
Puertos	Alimentación, USB (1), Internet, Ethernet (1-4) y antena R-SMA (2)
Botones	Reset (Reinicio), Wi-Fi Protected Setup y
	encendido
Indicadores LED	Panel superior: Encendido
	Panel trasero: Internet, Ethernet (1-4)
UPnP	Compatible
Funciones de seguridad	WPA2
Bits de clave de seguridad	Cifrado de hasta 128 bits
Compatibilidad con sistema de archivos de	FAT, NTFS y HFS+
almacenamiento	
Compatibilidad con exploradores	Internet Explorer 8 o superior, Firefox 4 o
	superior, Google Chrome 10 o superior y Safari
	4 o superior

### **Características físicas**

Dimensiones	192 x 37 x 118,8 mm
Peso de la unidad	284 gramos
Corriente	12 V, 1,5 A
Certificaciones	FCC, IC, CE, Wi-Fi a/b/g/n/ac
Temperatura de funcionamiento	Entre 0 y 40 °C
Temperatura de almacenamiento	Entre -20 y 60 °C
Humedad de funcionamiento	Entre 10 % y 80 % de humedad relativa sin condensación
Humedad de almacenamiento	Entre 5 % y 90 % sin condensación

#### Notas:

Para obtener información sobre el cumplimiento normativo, la garantía y la seguridad consulta el CD incluido con el router o ve a Linksys.com/support/EA6350.

Las especificaciones están sujetas a cambios sin previo aviso.

Rendimiento máximo según lo establecido en las especificaciones de la norma IEEE 802.11. El rendimiento real puede variar y la capacidad de la red inalámbrica, el índice de producción de datos, el alcance y la cobertura pueden disminuir. El rendimiento depende de numerosos factores, condiciones y variables, entre ellos, la distancia desde el punto de acceso, el volumen de tráfico de la red, los materiales de construcción de la vivienda, el sistema operativo utilizado, la combinación de productos inalámbricos presentes en la red, las interferencias y otras condiciones adversas.

BELKIN, LINKSYS y otros nombres y logotipos de productos son marcas comerciales del grupo de empresas Belkin. Las marcas comerciales de terceros mencionadas pertenecen a sus respectivos propietarios. Las licencias y los avisos de software de terceros que se utilizan en este producto pueden consultarse aquí: http://support.linksys.com/en-us/license. Ponte en contacto con nosotros a través de http://support.linksys.com/en-us/gplcodecenter para cualquier pregunta o solicitud de código fuente GPL.

© 2019 Belkin International, Inc. y/o sus filiales. Todos los derechos reservados.