

## Desktop & Mobile App



WD My Cloud™



<http://wd.com/wdmycloud/apps>

- \* WD My Cloud EX4100 und das Wireless-Gerät müssen mit demselben Netzwerk verbunden sein.
- \* Le WD My Cloud EX4100 et le périphérique sans fil doivent être connectés au même réseau.
- \* WD My Cloud EX4100 e il dispositivo wireless devono essere connessi alla stessa rete.
- \* WD My Cloud EX4100 y el dispositivo inalámbrico deben estar conectados a la misma red.
- \* De WD My Cloud EX4100 en het draadloze apparaat moeten verbonden zijn met hetzelfde netwerk.
- \* **Urządzenie WD My Cloud EX4100 oraz urządzenie bezprzewodowe muszą być połączone z tą samą siecią.**
- \* O WD My Cloud EX4100 e o dispositivo sem fio devem estar conectados à mesma rede.
- \* WD My Cloud EX4100 og trådløs enhed skal have oprettet forbindelse til det samme netværk.
- \* WD My Cloud EX4100 ja langattoman laitteen on oltava yhteydessä samaan verkkoon.
- \* WD My Cloud EX4100 og den trådløse enheten må være koblet til det samme lokalnettverket.
- \* WD My Cloud EX4100 och trådlös enhet måste vara anslutna till samma nätverk.
- \* **A WD My Cloud EX4100 meghajtónak és a vezeték nélküli eszköznek ugyanarra a hálózatra kell csatlakoznia.**
- \* **WD My Cloud EX4100 ve kablosuz aygıtın, aynı ağa bağlı olması gerekir.**
- \* **WD My Cloud EX4100 a bezdrátové zařízení musí být připojeny ke stejné síti.**
- \* **WD My Cloud EX4100 a bezdrátové zariadenie musia byť pripojené do rovnakej siete.**
- \* WD My Cloud EX4100 dan perangkat nirkabel harus terhubung ke jaringan yang sama.
- \* **Η μονάδα WD My Cloud EX4100 και η ασύρματη συσκευή πρέπει να είναι συνδεδεμένες στο ίδιο δίκτυο.**
- \* WD Cloud EX4100 およびワイヤレス端末は、同一ネットワークに接続してください。
- \* WD My Cloud EX4100 및 무선 장치는 동일한 네트워크에 연결되어 있어야 합니다.
- \* **WD My Cloud EX4100 și dispozitivul fără fir trebuie să fie conectate la aceeași rețea.**
- \* **WD My Cloud EX4100 и беспроводное устройство должны быть подключены к одной и той же сети.**
- \* **WD My Cloud EX4100 和无线设备必须连接到同一网络。**
- \* **WD My Cloud EX4100 和無線裝置必須連線至相同的網路。**
- \* **يجب توصيل WD My Cloud EX4100 والجهاز اللاسلكي بالشبكة ذاتها.**

## Technical Support Services

<http://support.wd.com>  
<http://www.wd.com>

If you encounter problems with this product, please contact WD Technical Support.

<b>United States/North America</b>	
English	800.ASK.4WDC (800.275.4932)
Spanish	800.832.4778
<b>Asia Pacific</b> (all countries) <a href="http://support.wd.com/contact">http://support.wd.com/contact</a>	
Asia Pacific (non toll free)	+86.21.2603.7560
Australia & New Zealand	+800.2275.4932
India	1800 200 5789 / 1800 419 5591
Singapore	1800.608.6008
Taiwan	0800.225 593
Thailand	1800.852.5913
<b>Europe (toll free*)</b> 0800.27549338	
<small>* Austria, Belgium, Czech Republic, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Poland, Slovakia, Spain, Sweden, Switzerland, United Kingdom</small>	
Europe (non toll free)	+31.880062100
Russia	8 10 8002 335 5011
<b>Middle East/Africa</b> +31.880062100	



Western Digital, WD, the WD logo, My Cloud, and WD My Cloud are registered trademarks of Western Digital Technologies, Inc. in the U.S. and other countries. Other marks may be mentioned here in that belong to other companies. Specifications subject to change without notice.

© 2015 Western Digital Technologies, Inc. All rights reserved.

Western Digital  
3355 Michelson Drive, Suite 100  
Irvine, California, U.S.A. 92612

4079-705150-802 Mar 2015




## My Cloud™ EX4100 Diskless NAS



## Quick Installation Guide

1

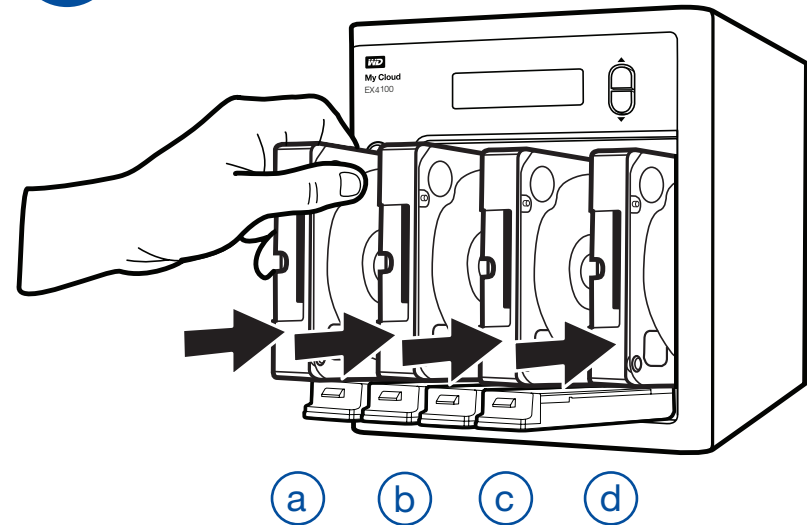


3




### Wireless Devices

\* WD My Cloud EX4100 and wireless device must be connected to the same network.


5

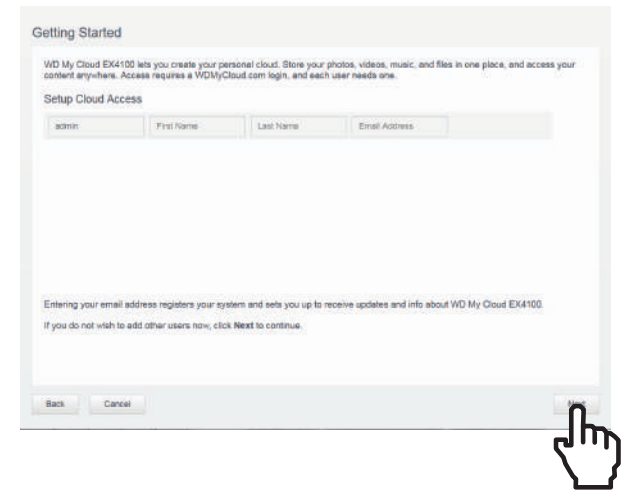

2

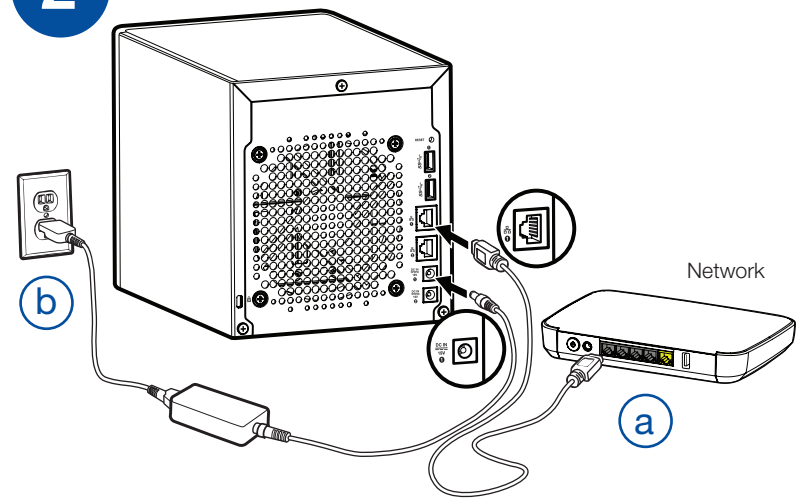

4

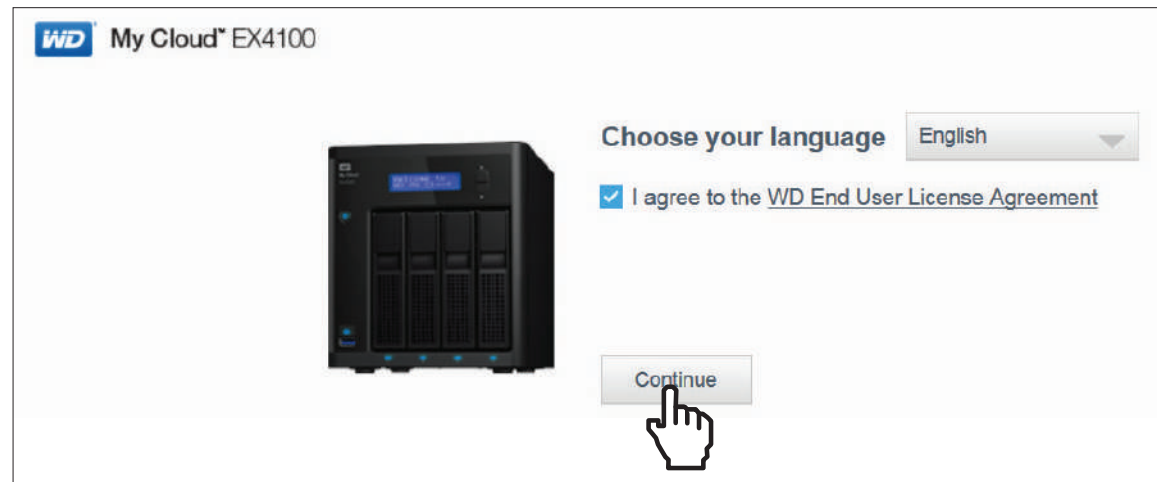

<http://products.wd.com/docs>